

# AutoStyled



**2015+ FOCUS ST AND FOCUS RS  
EMERGENCY BRAKE BOOT INSTALL**

Congratulations on purchasing the finest automotive accessories on the market available for your vehicle. They will add a nice touch of class to your vehicle while maintaining full functionality and durability over the life of your car. We take pride in using the highest quality Materials and craftsmanship available and this shows in the quality of the product. We are so confident in our product, that if you are not 100% satisfied, you can return it within 30 days from the original purchase date for a full refund from the origin of purchase.

DISCLAIMER:

PLEASE READ AND MAKE SURE YOU FULLY UNDERSTAND THE INSTALLATION INSTRUCTIONS PRIOR TO INSTALLING AUTOSTYLED PRODUCTS AND ACCESSORIES. FAILURE TO INSTALL THE PRODUCT CORRECTLY CAN AND WILL RESULT IN IRREVERSIBLE VEHICLE DAMAGE AND OR PERSONAL HARM. IF YOU DO NOT FEEL COMFORTABLE WITH ANY OF THE REQUIRED STEPS, WE HIGHLY SUGGEST TAKING THE VEHICLE TO A QUALIFIED AND EXPERIENCED TECHNICIAN. FAILURE TO UNDERSTAND THE INSTRUCTIONS WHICH RESULTS IN DAMAGE AND OR INJURY IS THE SOLE RESPONSIBILITY OF THE INSTALLER AND ALL FAULT LIES WITH THAT PARTY AND OR INDIVIDUAL AND IS NOT IN ANY WAY, SHAPE OR FORM THE RESPONSIBILITY OF AUTOSTYLED.

AUTOSTYLED PRODUCTS ARE SOLD FOR “OFF-ROAD” USE ONLY AND MAY NOT MEET LEGAL REQUIREMENTS FOR OPERATIONS ON PUBLIC ROADS AND HIGHWAYS. WE PUT THE RESPONSIBILITY SOLELY ON THE END CONSUMER/CUSTOMER TO VERIFY THAT THE PRODUCTS DO NOT EFFECT THE VEHICLES ELIGIBILITY TO BE DRIVEN ON PUBLIC ROADS AND HIGHWAYS. INSTALLATION OF AUTOSTYLED PRODUCTS MAY VOID FACTORY OR AFTERMARKET WARRANTIES.



### **INSTALLATION MATERIAL REQUIRED:**

- 2 ALLIGATOR CLIPS
- DIAGONAL CUTTERS
- SMALL FLAT HEAD SCREWDRIVER
- HH-66 OR OTHER FABRIC SAFE ADHESIVE

### **ITEMS INCLUDED:**

- EMERGENCY BRAE BOOT
  - ZIP-TIE

### **INSTALL DIFICULTY:**


2 out of 5. Some mechanical understanding



1. **PULL UP THE BRAKE AND REMOVE THE FACTORY TRIM. STARTING AT THE BOTTOM TOWARDS THE FRONT OF THE CAR SIMPLY LIFT ON THE UNDER SIDE TO POP IT OUT AND WORK YOUR WAY REARWARD**



2. **USING A SMALL SCREWDRIVER, PRESS ON THE CLIP CENTERS AROUND THE PERIMETER TO SEPARATE THE TWO PIECES**

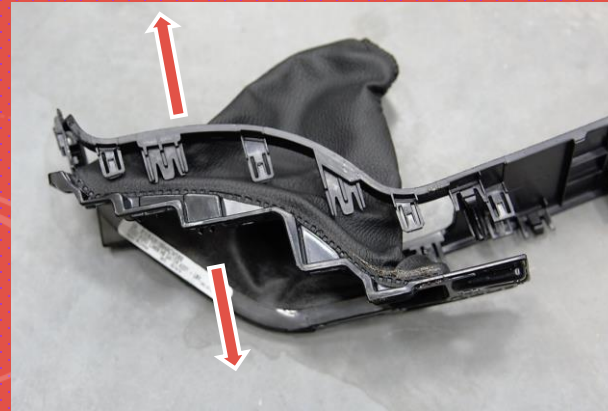




**3. SEPARATE THE STOCK BOOT FROM THE CAGE AND REMOVE ANY REMAINING ADHESIVE OR FABRIC MATERIAL**



**4. INSTALL THE NEW BOOT TO THE CAGE BY APPLYING A LIGHT COAT OF ADHESIVE ONTO THE OUTSIDE LIP IN THE SAME LOCATION AS THE STOCK BOOT. WE FIND IT EASIER TO GLUE ONE SECTION AT A TIME AND START AT THE TOP, WORKING YOUR WAY AROUND. SECURE THE BOOT IN PLACE WITH ALIGATOR CLIPS WHILE YOU WORK ON THE OPPOSITE SIDE.**



**5. ALLOW 10-20MIN FOR THE HH-66 ADHESIVE TO CURE, EXTENDING THE TIME IF ITS COLDER. THEN SLIDE THE TWO PIECES BACK TOGETHER AND TURN THE BOOT INSIDE OUT TO PREPARE FOR INSTALL.**

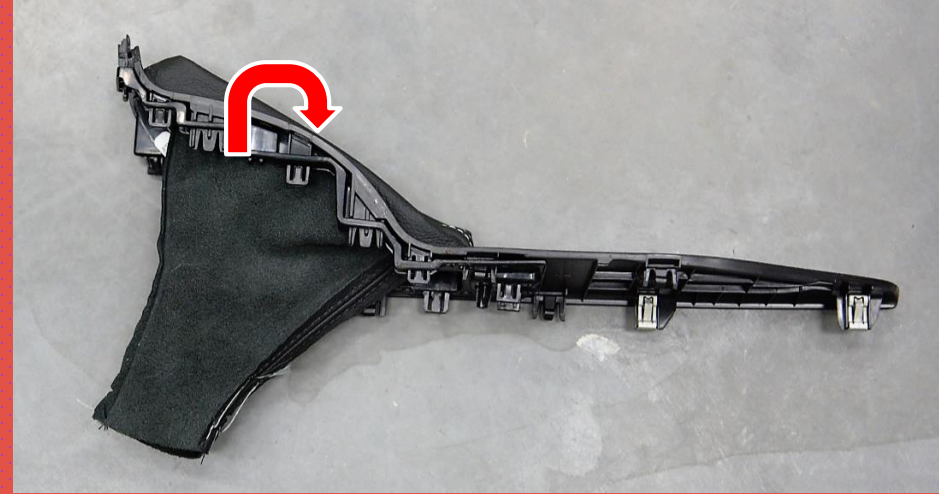

**6. SLIDE THE INSIDE-OUT BOOT OVER THE HANDLE UNTIL IT BOTTOMS OUT ON THE HANDLE. THEN USING THE SUPPLIED ZIP-TIE, SECURE THE BOOT TO THE HANDLE AND REMOVE THE EXCESS ZIP-TIE WITH DIAGONAL CUTTERS. MAKE SURE THAT THE ZIPTIE GOES INTO THE SLOT/GROOVE AT THE END OF THE HANDLE.**





**7. SLIDE THE BOOT BACK OVER THE HANDLE, CLIP THE TRIM INTO THE CENTER CONSOLE, ACTIVATE THE BRAKE SEVERAL TIMES TO ENSURE THAT THERE ARE NO ISSUES. ENJOY YOUR NEW AUTOSTYLED EMERGENCY BRAKE BOOT!**

