




INSTALLATION INSTRUCTIONS

FFA 1.10109

SUBARU EJ Series Turbo Blanket

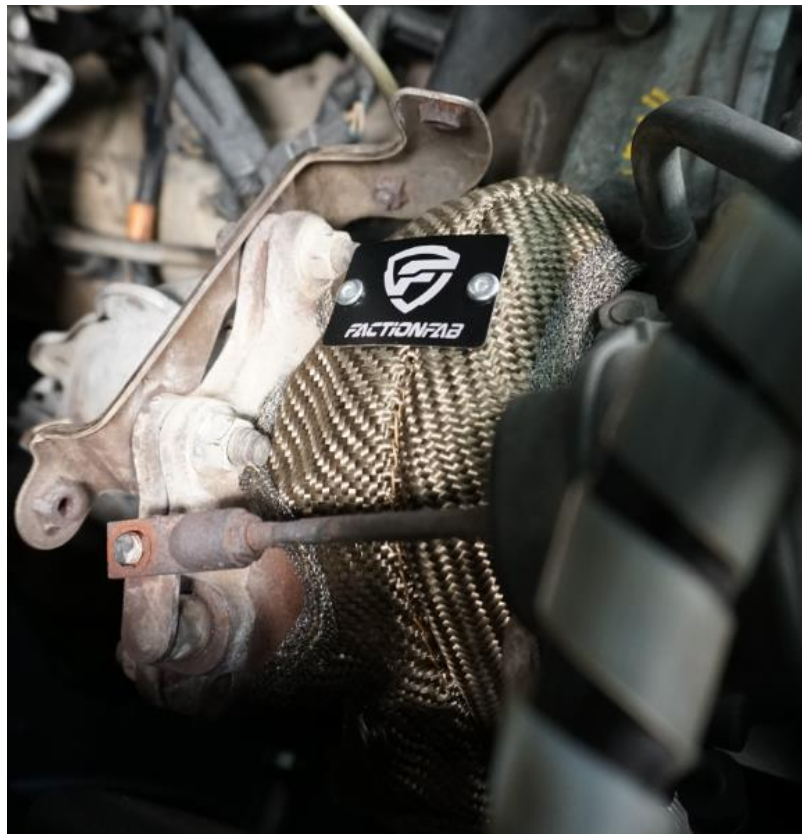

BILL OF MATERIALS			
Item #	Description	QTY	Part Number
1	EJ BLANKET	1	1.10109.1
2	STAINLESS WIRE	1	NA

TOOL LIST
Ratchet, Extensions
10mm, 12mm SOCKET
Screwdriver
Wire Cutters


DISCLAIMER: PLEASE READ AND MAKE SURE YOU FULLY UNDERSTAND THE INSTALLATION INSTRUCTIONS PRIOR TO INSTALLING FACTION FAB PRODUCTS AND ACCESSORIES. FAILURE TO INSTALL THE PRODUCT CORRECTLY CAN AND WILL RESULT IN IRREVERSIBLE VEHICLE DAMAGE AND OR PERSONAL HARM. IF YOU DO NOT FEEL COMFORTABLE WITH ANY OF THE REQUIRED STEPS, WE HIGHLY SUGGEST TAKING THE VEHICLE TO A QUALIFIED AND EXPERIENCED TECHNICIAN. FAILURE TO UNDERSTAND THE INSTRUCTIONS WHICH RESULTS IN DAMAGE AND OR INJURY IS THE SOLE RESPONSIBILITY OF THE INSTALLER AND ALL FAULT LIES WITH THAT PARTY AND OR INDIVIDUAL AND IS NOT IN ANY WAY, SHAPE OR FORM THE RESPONSIBILITY OF FACTION FAB.

FACTION FAB PRODUCTS ARE SOLD FOR "OFF-ROAD" USE ONLY AND MAY NOT MEET LEGAL REQUIREMENTS FOR OPERATIONS ON PUBLIC ROADS AND HIGHWAYS. WE PUT THE RESPONSIBILITY SOLELY ON THE END CONSUMER/CUSTOMER TO VERIFY THAT THE PRODUCTS DO NOT EFFECT THE VEHICLES ELIGIBILITY TO BE DRIVEN ON PUBLIC ROADS AND HIGHWAYS. INSTALLATION OF FACTION FAB PRODUCTS MAY VOID FACTORY OR AFTERMARKET WARRANTIES.

USE OF PRODUCT IN A NON-CONFIRMED APPLICATION, DISASSEMBLY OF THE PRODUCT, MODIFICATION OF THE PRODUCT, EXPOSING PRODUCT TO CORROSIVE OR PETROLIUM BASED CHEMICANS WILL VOID ANY AND ALL WARRANTY.


1

Remove Intercooler Bolts and Blow-Off/Bypass-valve bolts

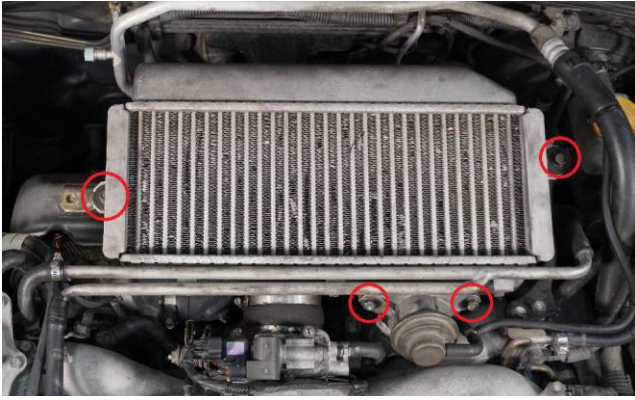

2

Loosen Intercooler clamps

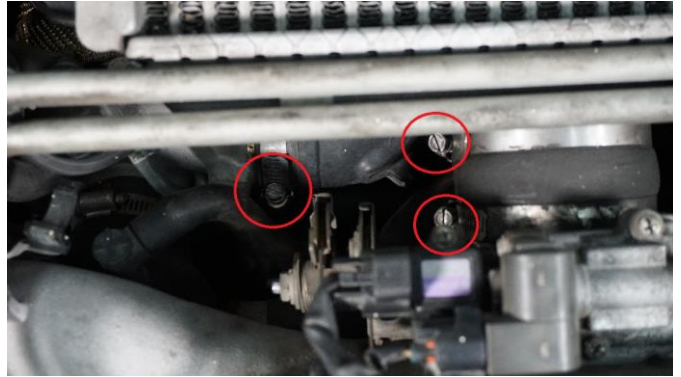


3

Remove P.C.V Hoses and Remove Intercooler



4

Remove Intercooler Bracket near Turbo

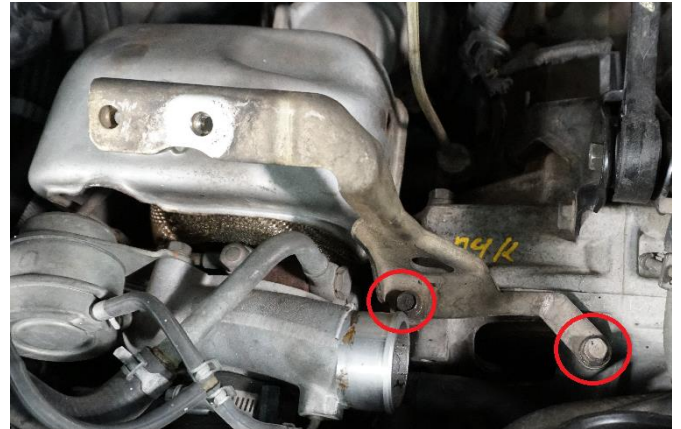

5

Remove the 8 Bolts that secure the Stock Heat Shield




6

Cut the supplied Stainless Wire into 2 equal length pieces. Wrap each piece 5 times around a stud before install.



7

Pass the wires under the turbo avoiding hoses, and align blanket into its location (under wastegate arm)

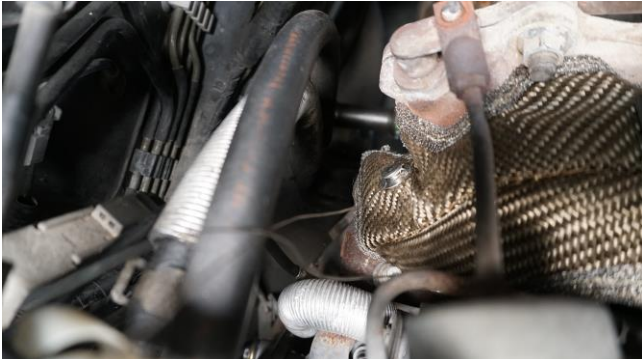

8

Wrap wire around opposite studs, securing the blanket in place. Wrap wire 5 times around stud



9

Optional. Stock Heat-Shield can be mounted over the blanket covered turbo.



Follow Steps 4 to 1 backwards, tighten all re-installed hardware to factory specification to complete the install.